



SORTware / CONware

SORTware / CONware are the server side softwares of conveyor / sorter systems. SORTware is capable of working with pusher, narrow belt, roll-on, divert, shoe, cross belt and other types of sorters. SORTware / CONware can communicate with SORTcontrol and COMware. They have highest priviledge on the system, and they are capable of restricting user interference from SORTcontrol. They can be desktop applications or windows services according to the needs of the system.



LIGHTware

LIGHTware is the pick-to-light , put-to-light controlling/monitoring application. It will boost your productivity while decreasing caution based mistakes. LIGHTware is a desktop application.



SORTcontrol

SORTcontrol is the electrical and logic level controlling software of all systems. It is used to gather information from sensors, scanners, motors, PTL modules, etc. Use this information to control electrical, hydraulic and pneumatic systems of conveyors, lifts, sorters, info screens, etc. send cyclic and acyclic data to servers. Identify errors, and inform user about the errors. SORTcontrol also includes HMI's on the field. SORTcontrol is a PLC application.



COMware

COMware is the tailor-made communication part of the system with the customer. It is used to get application specific information and send the required information. Communication can be based on web services, file transfer, database, messaging queues, customer specific TCP/IP telegrams, etc. COMware can gather information from all other softwares CONware, SORTware, etc. COMware can be a desktop application or a windows service according to the needs of the system.



REPware is the reporting interface of the system displaying important data for the specific layout, specific system and specific customer.



TELEware

TELEware is the monitoring, and assistance software of telescopic convevors.







Şerifali Mah. Beyan Sokak No: 58 Kat: 2 34775 Ümraniye / İstanbul - TURKEY E-mail: info@argevi.com Office: +90 216 353 60 10